


# Ez

by **Carter**  
Enterprises

Accuracy Defined Through Design

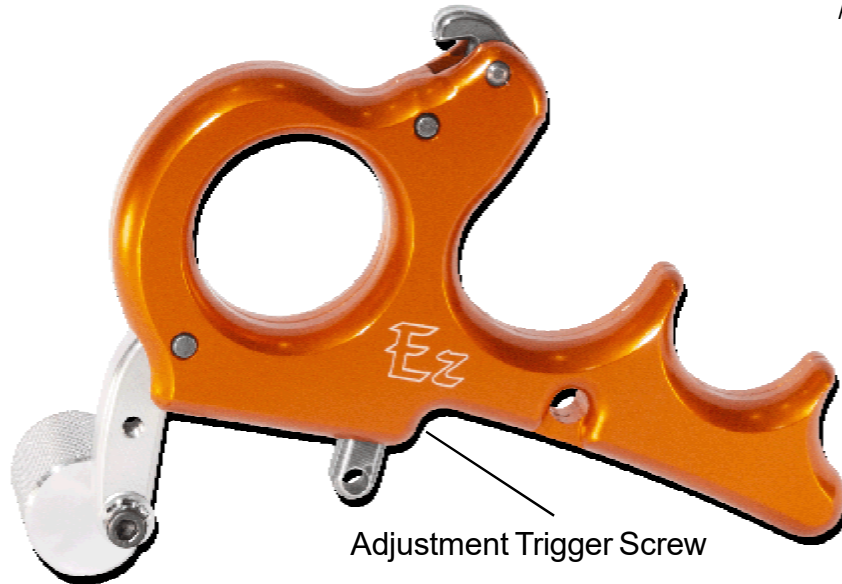

## Tension Adjustment:

With no need for travel adjustment, the only adjustment remaining is your trigger tension adjustment. Simply insert the 1/16 hex key inside the hole located in the cocking lever and screw clockwise for more tension and counter clockwise for less tension..

Before you attempt to draw your bow, always pull test your release on a simulator first to reduce the chance of misfire.