

Only

by **Carter**
Enterprises

Accuracy Defined Through Design



General Directions for Use:

Crescents

The Only comes with 3 crescents. The crescents have marks scribed onto them in 2 places. One set runs along the outer edge of the crescent designating position of the angle. The other markings are located at the end of the crescents and designate degree of the ledge. They are numbered with a series of dots, i.e. The zero degree crescents will have no dot on it, the 5 degree will have 5 dots on it, etc. The higher the number, the slower the degree.

To change speed by angle.

Loosen the cap screw located just above the word only one full turn. Using a small hex key (supplied) insert the key in the small hole gently pull the crescent out for slower speed or pushing it into the body of the release for faster. Keep note of the position of the scribe marks for position of setting. (Note* We recommend pushing the crescent past the point of desired setting, then using the hinge of the release to push the crescent back in for best results.) Re-tighten the screw and pull test on a loop of release rope or a bow simulator to check speed before drawing. Caution: If the crescent is adjusted to fast it may fire upon drawing the bow, possibly causing damage or injury. We recommend testing on a bow simulator before drawing a bow with the Only after adjustment.

To Change crescents.

Loosen the Cap screw just above the word Only several turns. Push the crescent into the body of the release. The opposite end will expose itself and allow you to remove the crescent. Insert the desired crescent into the slot and adjust for necessary travel.

Thumb Rest

Carter Enterprises recommends wrapping your thumb completely around the thumb rest, thus insuring the release is at the proper angle when drawing back. Note: if the release is not at the proper angle when drawing back, there is a chance the release will fire prematurely and may cause damage.