


Target 4 +

by **Carter**
Enterprises

Accuracy Defined Through Design

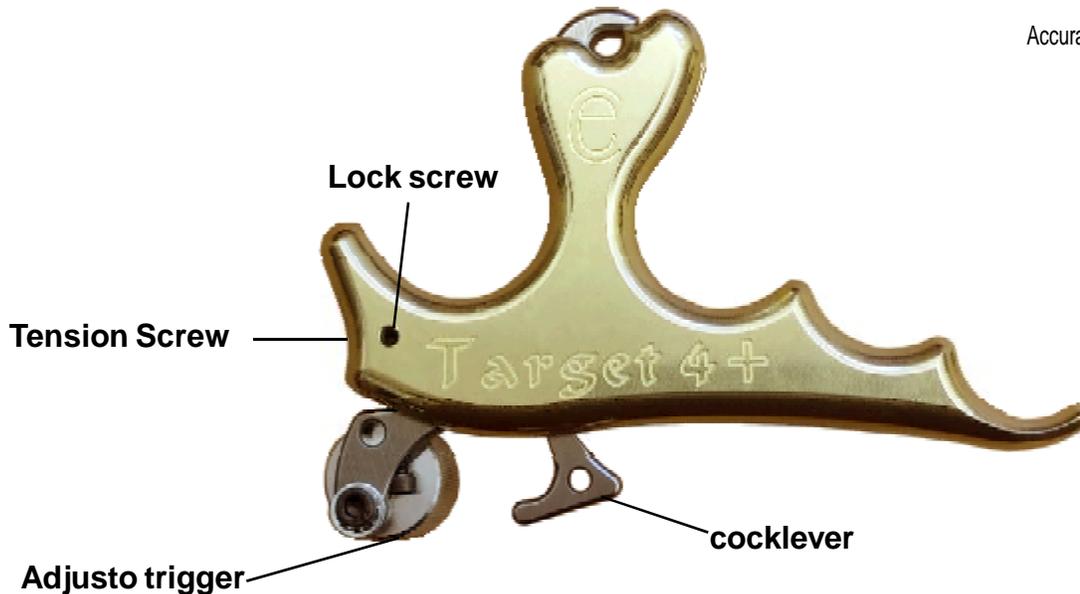

General Directions for Use:

Trigger Travel

To adjust the trigger travel*, turn the set screw clockwise for less travel, and counterclockwise for more travel. After adjusting the set screw, test the release by hooking a string to a stationary object and test-firing the release. Caution: if the set screw is adjusted for insufficient travel, the release may fire prematurely and possibly cause damage.

**Travel refers to the degree the trigger will move prior to the release firing.*

Tension Screw

Using .050 hex key, loosen the locking screw on the side of the case. This will allow you to use the 3/32 hex key to adjust the larger tension adjustment screw. In gives you more tension, out gives you less tension. The screw allows you a micro adjust feature to allow you the perfect amount of trigger tension. After adjusting to your preference, snug the locking screw to keep the adjustment screw from moving. Caution, over tightening the locking screw can damage the threads of the adjustment screw.

Adjusto Trigger

Most Carter thumb trigger releases include an adjustable knurled knob to help the release fit more comfortably in your hand. To adjust the knurled knob, loosen the bolt, rotate the knob to the desired fit, and retighten the bolt to hold the Adjusto Trigger in position.

Recommended Use

When drawing back, always keep your thumb away from the trigger. Carter Enterprises recommends shooting the Target 4 + using back-tension form off a D-loop or the release rope. Once you are at full draw, push your bow hand toward the target and lightly pull your release hand back while resting your thumb on the trigger, thus firing it in one smooth motion.

For more information, contact Carter Enterprises technical support at 1-208-624-3467.