

Whisper

by **Carter**
Enterprises

Accuracy Defined Through Design



General Directions for Use:

Trigger Travel

Trigger travel refers to the amount of movement the trigger will move before the release fires. This is not to be confused with trigger tension. To adjust travel we recommend cocking the whisper, then screw the travel set screw in (clockwise) until the trigger fires. Back the screw out approximately $\frac{1}{4}$ turn. Cock the release and test fire the release on a simulator before drawing your bow. Insufficient travel adjustment may cause the release to fire prematurely and possibly cause damage or injury.

Trigger Tension Adjustment

The whisper features the Magnet adjustment tension system. To lighten the tension, simply push out one or two magnets to achieve the desired tension.

Recommended Use:

When drawing back, always keep your thumb away from the trigger. Simply hook the Whisper into your d-loop, draw and anchor. Once anchored and on target, apply your thumb to the trigger and gently pull through the shot. This should fire the release in a smooth controlled motion giving you consistent accurate shooting.