


Quickie Plus

by **Carter**
Enterprises

Accuracy Defined Through Design

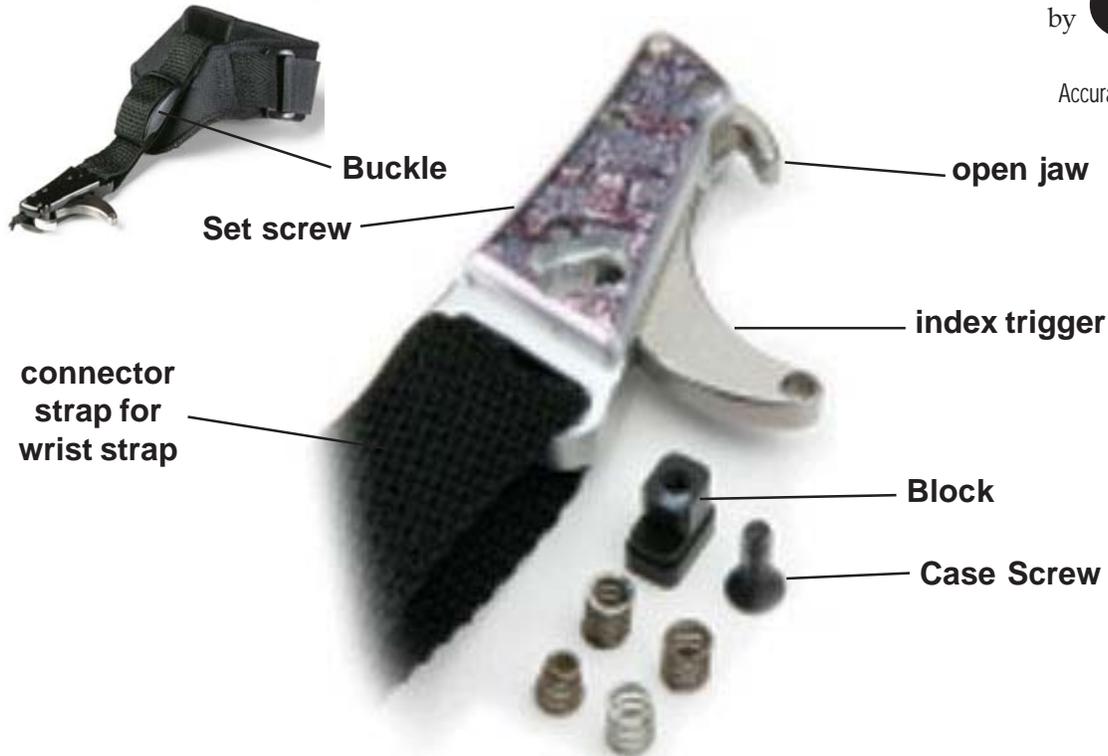

General Directions for Use:

Trigger Travel

To adjust the trigger travel*, turn the set screw clockwise for less travel, and counterclockwise for more travel. After adjusting the set screw, test the release by hooking a string to a stationary object and test-firing the release. Caution: if the set screw is adjusted for insufficient travel, the release may fire prematurely and possibly cause damage.

**Travel refers to the degree the trigger will move prior to the release firing.*

Adjusting Release Length

The length of this release can be adjusted by lengthening or shortening the connecting strap which links the wrist strap to the head of the release. Once you have adjusted the length, loop the strap back through the small buckle to secure its position. *Warning: Failure to double-back through the small buckle on the connector strap could cause the head of the release to come loose during the execution of a shot.*

Changing spring with the new I.T.S

Changing springs to modify the trigger tension in the new Quickie 1 Plus & Quickie 2 Plus. Just remove the casing screw, take the plate on the casing screw out and push the block of the other side out of the case, the spring should go out with it, if not use something to push it out. When insert new spring, put the block back 1/2 way and put the desired spring in it's place, you might need a flat screw driver to put it in place after that you can put the block all the way in. Put the plate on the casing screw back and screw it in - then you are all set.

There are a variety of spring weights to choose from so you can easily find the perfect tension for your shooting style.