


Whisper 2

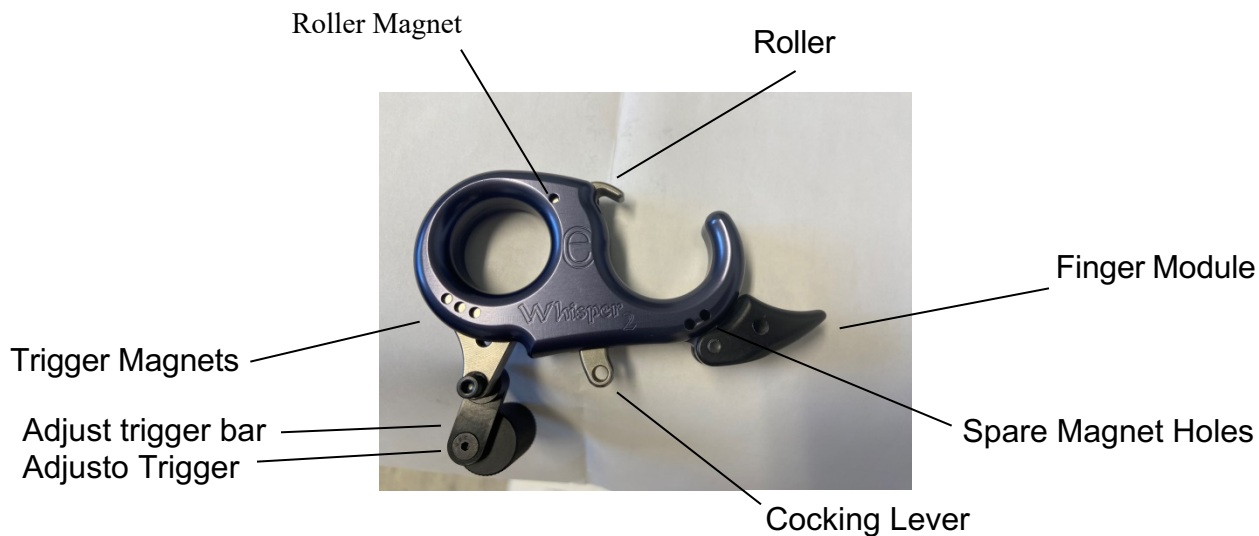

General Directions for Use:

Trigger Tension Adjustment:

The Whisper 2 features the Magnet Adjustment Tension System. To lighten the tension, simply push out one or two trigger magnets to achieve the desired tension. One trigger magnet and the roller magnet are required for release to function. Spare magnets can be stored in the two spare magnet holes when not being used.

Adjusto Trigger and Adjusto Trigger Bar:

The Whisper 2 release includes an adjustable knurled knob as well as an adjustable bar to help the release fit more comfortably in your hand. To adjust the knurled knob, loosen either bolt, rotate the bar or knob to the desired fit, and retightens the bolt to hold the Adjusto Trigger and bar in position.

Recommended Use:

We recommend practicing each release on a shot trainer or string before using on your bow. This will help gain confidence in yourself and your release. Begin by engaging the trigger by pressing down on the cocking lever (away from trigger). You will feel it click into place. Simply hook the Whisper 2 into your d-loop, draw and anchor. When drawing back, always keep your thumb away from the trigger. Once anchored and on target, apply your thumb to the trigger and gently pull through the shot. This should fire the release in a smooth controlled motion giving you consistent accurate shooting.

For more information, contact Carter Enterprises technical support at 1-208-624-3467.